

Carrera®

PROFI RC

GB

USA

Assembly and operating instructions

GR

Οδηγίες συναρμολόγησης και λειτουργίας

RC

安装和使用说明

ROK

조립과 작동 방법

- #370183012 Lime Star – PX
- #370183017 Ford F-150 Raptor – PX
- #370183021 Drift Racer – PX
- #370183022 Red Bull Peugeot WRX 208 – Rallycross, Hansen – PX – Carrera Profi RC
- #370183023 Gulf Racer – PX – Carrera Profi RC
- #370102012 Crawler – PX – Carrera Profi RC



FR
Manuel



RC Power
carrera-rc.com



Digital version

Made in China · Fabriqué en Chine

Carrera Toys GmbH · Rennbahn Allee 1 · 5412 Puch / Salzburg · Austria

v10-01

GB USA Dear customer

Congratulations on purchasing a Carrera RC model car, manufactured in accordance with the latest technology. As it is our constant endeavour to develop and improve our products, we reserve the right to make modifications, either of a technical nature or with respect to features, materials, and design, at any time, and without prior notice. For this reason, no claims will be accepted for any slight deviations in your product from the data and illustrations contained in these instructions. These operating and assembly instructions are an integral part of the product. **Important:** Please read this manual carefully and **keep these instructions for future reference** and in the event that the product is passed on to a third party.

For the latest version of these operating instructions and information on replacement and spare parts available, please visit carrera-rc.com in the service area.

Declaration of conformity

Carrera Toys GmbH hereby declares that this model including the controller conforms with the fundamental requirements of the following EC directives: EC Directives 2001/95/EC and the other relevant regulations of Directive 2014/53/EU (RED).

The original declaration of conformity can be requested from carrera-rc.com.



Maximum radio-frequency power transmitted <10 dBm · Frequency range: 2400 – 2483.5 MHz

Warning!

This remote-controlled model is NOT A PLAYTHING and is only suitable for young people over 14 years of age. This model is not intended for use by children, unless they are supervised by a responsible adult. Inappropriate use may result in severe injuries and/or damage to property. It has to be operated with care and caution and requires both mechanical and mental skills. The operating instructions contain notes on safety and technical regulations as well as information on maintaining and operating the product. It is indispensable to read these instructions thoroughly before the first usage. Only this helps to avoid accidents with injuries and damage.



This symbol, showing refuse bins with a cross through them, denotes that empty batteries, rechargeable batteries, button cells, rechargeable battery packs, equipment batteries, disused electrical equipment, etc. should not be disposed of in domestic refuse, as they are harmful to the environment and health. Do not mix dissimilar battery types or employ new and used batteries together. Rechargeable batteries are only to be charged by adults. Empty batteries should be removed from the product. Do not recharge non-rechargeable batteries due to risk of explosion. Never use damaged batteries. Remove batteries if consumed or if product is to be left unused for long. Always replace the whole set of batteries at one time, taking care not to mix old and new ones, or batteries of different types.

Rechargeable batteries are to be removed from the toy before being charged. Batteries are to be inserted with the correct polarity. Supply terminals are not to be short-circuited.

The appliance is only to be used with the power supply unit provided with the appliance. The use of a different power supply unit may lead to the permanent damage of the battery and neighbouring parts, as well as physical injury! **WARNING: For the purposes of recharging the battery, only use the detachable supply unit provided with this toy.** Battery chargers used with the toy are to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they must not be used until the damage has been repaired. The toy is only to be connected to Class II equipment bearing the following symbol: .

**FCC statement**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference; and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IC statement

The device contains license-exempt transmitter(s)/ receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:

1. The device must not cause interference;
2. The device must accept any interference, including interference that may cause undesired operation of the device.

Safety instructions

A A Carrera RC vehicle is a remote-controlled model car that uses special rechargeable batteries for this purpose. Only original Carrera RC LiFePO₄ rechargeable batteries may be used. Rechargeable batteries are to be removed from the toy before being charged.

B The Carrera RC vehicle is designed for hobby use only and may only be operated on tracks and in spaces especially intended for this purpose. **WARNING!** Do not use the Carrera RC vehicle in road traffic.

C Do not operate the car beneath overhead high-voltage cables or broadcasting masts or during a storm! Atmospheric disturbances can affect the operation of the vehicle. When there are large temperature differences between your car's garage and the running track, please wait until the vehicle has had time to acclimate. This will help prevent condensation forming and the possibility of malfunctions resulting.

D Never operate the product on grass surfaces. There is the risk of grass hindering the movement of the axles, which can lead to the motor overheating. Do not use the Carrera RC vehicle for transporting goods, persons or animals.

E Never use the Carrera RC vehicle outdoors during rain or snowfall. The car must not be run through water, puddles and snow, and must always be kept stored in a dry place. Wet surfaces without puddles will not affect the car's performance as the electronic equipment is protected against spray.

F Never operate the vehicle near rivers, ponds or lakes, to avoid the risk of the Carrera RC car falling into

the water. Avoid running on courses which are laid exclusively with sand.

G Do not expose the Carrera RC vehicle to direct sunlight. To avoid the electronics in the car overheating, when temperatures are above 35 °C, regular short pauses in operation are essential.

H Never subject the Carrera car to repeated changes of load – that means continuously reversing it.

I Always place the car on the floor by hand. Never throw the car on the floor from a standing position.

K Avoid jumping from jumps or ramps higher than 15 cm (0.49 ft.).

L The Carrera RC vehicle is not designed for collisions with walls or other obstructions.

M Never use strong solvents for cleaning the car. We recommend that you clean the vehicle using compressed air after every trip.

N To avoid malfunctions to the control system resulting in uncontrolled operation of the Carrera RC vehicle, check that the controller batteries and the rechargeable batteries in the vehicle have sufficient charge. Supply terminals are not to be short-circuited.

O The Carrera RC vehicle must be inspected before and after operation, each time it is used, to ensure that it has not become disassembled. Any screws or nuts that may have become loosened during operation must be tightened. Undo the two clips on the top of the bodywork to remove it.

Instruction Manual**Contents of package**

- 1** 1x Carrera ProFI RC Vehicle

- 1x Controller

- 1x USB charger cable

- 1x 6.4 V – 1300 mAh LiFePO₄, rechargeable battery

- 2x 1.5 V Mignon AA batteries (non-rechargeable)

Charging the rechargeable battery

2 Rechargeable batteries are to be removed from the toy before being charged. Take care only to charge the LiFePO₄ battery supplied with the LiFePO₄-charging unit (USB charger cable) also supplied. If you attempt to recharge the battery with any other LiFePO₄ battery charger or any other type of charger, this may result in serious damage. **Please carefully read the previous chapter with warnings and guidelines on the usage of rechargeable batteries before proceeding.** You can recharge the rechargeable battery with the respective USB charger cable from a computer USB port (USB 3.0) or a USB power supply unit with at least 1 A output voltage:

• Connect the USB charger cable with the USB port of a computer **①**. The LED on the USB charger cable lights green and indicates that the charger is correctly connected to the computer. When you connect an empty rechargeable battery, the LED on the USB charger cable goes off and indicates that the battery is being charged. **②** The USB charger cable is so designed that reversed polarity is not possible.

• It lasts about 80 minutes to recharge a discharged (NOT a deep-discharged) battery. When the battery is fully charged, the LED display on the USB charger cable lights green again

Always recharge the battery after use to prevent its becoming deep discharged. After use, the battery must be allowed to cool down for at least 20 minutes before it can be fully recharged. Recharge the battery occasionally (suggested every 2–3 months). Supply terminals are not to be short-circuited. Failure to treat the battery as described above can lead to its becoming defective. Never leave the battery unattended while it is being charged.

Inserting the batteries

3 Open the battery compartment with a screwdriver. Press the release button and take the battery compartment out of the controller. Please keep in mind the correct polarity. Different types of batteries or new and used batteries are not to be mixed. Push the battery compartment back into the controller until it latches in place. If necessary, screw the battery compartment in place with a screwdriver.

Installing the rechargeable battery / Bonding vehicle and controller

4 Undo the two clips on the top of the bodywork to remove it. (not valid for #37018301, #370102012)

5 Fasten the rechargeable battery and the cable in the mount as shown in the illustration.

6 Connect the end of the cable from the Carrera RC vehicle with the charged battery.

7 Switch the car ON at the ON/OFF switch. The LED on the car will flash rhythmically.

8 Switch on the controller. After a few seconds, the LEDs on the car and on the controller will light continuously, meaning the bind has been made.

Fasten the bodywork again with the two clips. (not valid for #37018301, #370102012)

Let's practise!

9 **Warning! This vehicle reaches speeds up to 50 km/h (31 mph) (not valid for #370102012).** Practice on an empty surface at least 6 metres (19.68') square. When first starting, be very careful when operating the gas pedal. Practice running slowly for at least two to three full charges of the battery before you start practising faster manoeuvres.

10 Now it's time to practise! Set up a Carrera RC vehicle racing track in a large empty area, using corner posts, empty cans, or similar objects. The basic technique to adopt when operating a Carrera RC is to drive fast on the straight sections and to slow down in the curves.

• When changing from the first battery to the second battery, you must stop running for at least ten minutes. At the next change, a pause of at least 20 minutes is absolutely essential.

• Avoid constant motor operation.

• If the car switches off several times one after another, the battery is dead. Please recharge the battery.

• To switch off after use, follow the steps in the reverse order.

• After use, remove or disconnect the battery. Always recharge the battery after use to prevent its becoming deep discharged. After use, the battery must be allowed to cool down for at least 20 minutes before it can be fully recharged.

• Always keep the rechargeable battery stored outside the vehicle.

• Clean the Carrera RC car after use.

Controller functions

11 When the controller is switched on, the red LED lamps at the front of the controller are lit.

12 Control digital proportional

Gas pedal to the rear: Steplessly-controlled forwards

Gas pedal to the front: braking, or steplessly-controlled backwards

차체를 다시 클립 2개를 사용하여 부착하십시오.

(#370183017, #370102012에는 해당하지 않습니다.)

자, 이제 연습합시다!

9 주의 이 차량은 시속 50 km 까지 속력을 낼 수 있습니다 (#370183017, #370102012에는 해당하지 않습니다.). 최소한 6x6 메터 넓이의 비 펼지에서 업습하십시오. 차를 사용시에는 속도조절기를 매우 조심하여 작동하십시오. 빠른 기동연습으로 넘어설수가 전에 최소한 2~3 충전량 정도 서행연습을 하십시오.

10 코그 장애물이 없는 평지에 비 상자들로 카레라 RC 차량 경주로의 경계선을 만드십시오. 카레라 RC 차량을 주행할 때 기본적인 조종기술은 직선로에서는 빨리 달리고, 커브로에서는 브레이크를 거는 것입니다.

- 첫번째 축전지에서 두번째 축전지를 교환할때까지 최소한 10분간 주행 휴식 시간을 지켜야 합니다. 다음 교환때는 반드시 최소한 20분간 휴식 시간을 가져야 합니다.

- 지속적으로 모터가 가동되는 것을 피하십시오.

- 차량이 뒤틀려 어려차례 저질로 깨지면 축전지가 비었습니다. 축전지를 충전하십시오.

- 주행이 끝난 후 끌 때는 역순으로 진행하십시오!

- 주행 후 축전지를 꺼내거나 연결을 분리하십시오. 축전지의 완전 방전을 피하기 위해 사용 후 축전지를 반드시 다시 충전하십시오. 축전지는 사용 후 다시 완전히 충전하기 전에 최소한 20분간 식혀야 합니다.

- 축전지는 항상 차량 외부에 보관하여야 합니다.

- 주행 후 카레라 RC 차량을 닦아주세요.

컨트롤러 기능

11 컨트롤러가 켜져있으면, 컨트롤러의 빨간색 점등이 빛을 발합니다.

12 디지털 비례 조종

속도조절기 뒷쪽으로: 단계 없이 전진

속도조절기 앞쪽으로: 브레이크 및 단계 없이 후진

조종간을 시계 방향으로 돌리십시오: 단계 없이 오른쪽

조종간을 시계 반대 방향으로 돌리십시오: 단계 없이 왼쪽

안전상의 이유에서 축전속력은 약 40% 정도 감소한다는 점을 주지하십시오 (#370183017, #370102012에는 해당하지 않습니다.).

13 Steering-TRIMM 운전설세조절

차량이 직진하지 않으면 이 기능에서 차량을 섬세조절할 수 있습니다.

14 2.4 GHz 기술 덕택에 한 개의 주행로에서 차량 16대까지 함께 주행할 수 있음. 이것은 운전자들간에 주파수를 조절하지 않고 가능함.

문제 해결

문제: 모델이 주행하지 않음.

원인: 컨트롤러나 모델의 스위치, 혹은 두 스위치 모두가 "OFF"임.

해결책: 켜기.

원인: 모델의 축전지가 악하거나 비어있음.

해결책: 축전된 축전지 잠작.

원인: 차량이 장애물에 걸려 정지 했습니다.

해결책: 고압보호장치가 차량을 깰습니다.

차량의 ON/OFF 스위치를 1번 OFF 위치에 놓았다가 다시 ON 위치로 옮기고 평면 위에 놓으십시오.

원인: S컨트롤러나 모델의 축전지/건전지가 악함.

해결책: 축전된 축전지, 혹은 건전지 잠작.

원인: 차량이 매우 뜨거움.

해결책: 차량과 컨트롤러를 끄고, 차량을 약 30분간 식힐 것.

원인: 과열방지장치가 너무 심하게 가열된 차량을 정지시킴.

해결책: 수신기를 끌 것. RC 차량 약 30분간 식힐 것.

문제: 통제되지 않음.

원인: 원하지 않는데도 차량이 움직임.

해결책: "축전지 잠작" **6** **7** **8**에 묘사된로 모델과 컨트롤러간의 연결을 실행하십시오.

오류와 변동이 있을 수 있습니다. - 색갈과 최종 디자인에 변동이 있을 수 있습니다.

기술과 디자인상의 변동이 있을 수 있습니다. - 픽토그램 = 삼장그림



ACCESSORIES & SPAREPARTS

ACCESSOIRES ET PIÈCES DE RECHARGE



carrera-rc.com

D Für jedes RC Fahrzeug und Flugobjekt ist auch weiteres Zubehör erhältlich. Passende Produkte finden Sie in unserem Onlineshop unter Zubehör oder bei Ihrem Fachhändler.

GB **USA** Additional accessories are available for each RC vehicle and aircraft. Suitable products can be found in our online shop in the accessories section or can be purchased from your authorised dealer.

F Des accessoires supplémentaires sont disponibles pour chaque véhicule RC et objet volant. Vous pouvez trouver les produits correspondants dans notre boutique en ligne sous la rubrique accessoires ou chez votre revendeur local

E Para cada vehículo y objeto volador RC hay también más accesorios disponibles. Encontrará los productos adecuados en nuestra tienda online en accesorios o en su tienda especializada.

I Per ogni veicolo RC e oggetto volante sono disponibili anche accessori aggiuntivi. Potete trovare i prodotti adatti nel nostro negozio online alla voce accessori o presso il vostro rivenditore specializzato.

CARRERA RC SUSTAINABILITY

CARRERA RC DURABILITÉ

D Da Carrera großen Wert auf Nachhaltigkeit legt, haben wir uns bewusst entschieden unsere Verpackungen aus recycelten bzw. ressourcen-schonenden Materialien herzustellen.

GB **USA** At Carrera, we place great value on sustainability, which is why we have made the conscious decision to produce our packaging from recycled and resource-friendly materials.

F Comme Carrera attache une grande importance à la durabilité, nous avons délibérément décidé de fabriquer nos emballages à partir de matériaux recyclés ou de matériaux préservant les ressources.

E Dado que Carrera concede gran importancia a la sostenibilidad, hemos decidido conscientemente fabricar nuestros embalajes con materiales reciclados o que ahorren recursos.

I Poiché Carrera attribuisce grande importanza alla sostenibilità, abbiamo deciso consapevolmente di produrre i nostri imballaggi con materiali riciclati o a basso consumo di risorse.