

#370200996 Mario Kart™ 8 · Mario
 #370200997 Mario Kart™ 8 · Yoshi

IAN: 387338

IAN: 387338



WARNING:
 CHOKING HAZARD - SMALL PARTS
 NOT FOR CHILDREN UNDER 3 YEARS.

ATTENTION:
 DANGER D'ÉTOUFFEMENT - PRÉSENCE DE PETITES PIÈCES
 NE CONVIENT PAS AUX ENFANTS DE MOINS DE 3 ANS.

carrera-rc.com

Carrera Toys GmbH · Rennbahn Allee 1 · 5412 Puch / Salzburg · Austria

03/2021_USA-Canada_V01-01

RC Power
 carrera-rc.com

Made in China
 Fabriqué en Chine

Digital version
 Version numérique
 Versión digital



ENGLISH

USA CDN Dear customer

Congratulations on purchasing a Carrera RC model car, manufactured in accordance with the latest technology. As it is our constant endeavour to develop and improve our products, we reserve the right to make modifications, either of a technical nature or with respect to features, materials, and design, at any time, and without prior notice. For this reason, no claims will be accepted for any slight deviations in your product from the data and illustrations contained in these instructions. These operating and assembly instructions are an integral part of the product. Non-observance of these operating instructions and the safety instructions they contain will render the guarantee null and void. These instructions are to be kept for future reference and in the event that the product is passed on to a third party.

For the latest version of these operating instructions and information on replacement and spare parts available, please visit carrera-rc.com in the service area.

Guarantee conditions

A Carrera product is built to high technical standards and is to be treated with care. Please ensure that you observe all the instructions contained in this guide. All components have been subjected to careful inspection (technical modifications and alterations to the model for the purpose of product improvement are reserved).

Should any faults nevertheless occur, guarantee is assumed within the scope of the following conditions:

The guarantee covers demonstrable material or manufacturing defects that existed at the time that the Carrera product was purchased. The guarantee period is 24 months beginning with the date of purchase. The guarantee does not extend to wearing parts (such as Carrera RC rechargeable batteries, antennas, tyres, gearbox components etc.), damage caused by improper treatment or use (such as performing jumps in excess of the recommended height, dropping the product etc.), or unauthorised intervention. Repair may only be performed by Carrera Toys GmbH itself or by a company it has authorised to do so. Within the scope of this guarantee, either the product as a whole or only the defective components will be replaced or equivalent substitution performed, as deemed appropriate by Carrera Toys GmbH. The guarantee does not cover transport, packaging or travel costs or any damage for which the buyer is responsible. These costs are to be covered by the buyer. Guarantee claims will only be accepted from the original purchaser of the Carrera product.

Guarantee claims can only be accepted when:

- The card has been filled in properly and sent in together with the defective Carrera product and the purchase receipt/invoice/cash-register receipt.
- No unauthorised alterations have been made by the buyer to the guarantee card.
- The toy has been treated in accordance with the operating instructions and subjected to its intended use.
- The damage/faulty operation is not due to acts of God or normal wear and tear.

Guarantee cards cannot be replaced.

Note for EU countries: Reference is hereby made to the seller's statutory guarantee obligation, to the extent that this guarantee obligation is not restricted by the product guarantee.

Declaration of conformity

Stadlbauer Marketing + Vertrieb GmbH hereby declares that this model including the controller conforms with the fundamental requirements of the following EC directives: EC Directives 2009/48/EC and the other relevant regulations of Directive 2014/53/EU (RED). The original declaration of conformity can be requested from carrera-rc.com.



Maximum radio-frequency power transmitted <10 dBm
 Frequency range: 2400 – 2483.5 MHz

Warning!

WARNING! This toy contains small parts which can be swallowed and is therefore not suitable for children under 3 years of age.
WARNING! danger of pinching during operation! Remove all packaging materials and wire fastenings before handing the toy over to the child. Please retain the packaging and address for information and in the event of any questions.

This symbol, showing refuse bins with a cross through them, denotes that empty batteries, rechargeable batteries, button cells, rechargeable battery packs, equipment batteries, discarded electrical equipment, etc. should not be disposed of in domestic refuse, as they are harmful to the environment and health. Do not mix dissimilar battery types or employ new and used batteries together. Rechargeable batteries are only to be charged by adults. Empty batteries should be removed from the product. Do not recharge non-rechargeable batteries due to risk of explosion. Rechargeable batteries are to be removed from the toy before being charged. Batteries are to be inserted with the correct polarity. Supply terminals are not to be short circuited.

The appliance is only to be used with the power supply unit provided with the appliance. The use of a different power supply unit may lead to the permanent damage of the battery and neighbouring parts, as well as physical injury! **WARNING: For the purposes of recharging the battery, only use the detachable supply unit provided with this toy.** Battery chargers used with the toy are to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they must not be used until the damage has been repaired. The toy is only to be connected to Class II equipment bearing the following symbol. or

FCC statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC statement

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Safety instructions

A The Carrera RC vehicle is designed for hobby use only and may only be operated on tracks and in spaces especially intended for this purpose. **WARNING!** Do not use the Carrera RC vehicle in road traffic.

B Do not operate the car beneath overhead high-voltage cables or broadcasting masts or during a storm! Atmospheric disturbances can affect the operation of the vehicle. When there a large temperature differences between your car's garage and the running track, please wait until the vehicle has had time to acclimatise. This will help prevent condensation forming and the possibility of malfunctions resulting.

C Never operate the product on grass surfaces. There is the risk of grass hindering the movement of the axles, which can lead to the motor overheating. Do not use the Carrera RC vehicle for transporting goods, persons or animals.

D Never use the Carrera RC vehicle outdoors during rain or snowfall. The car must not be run through water, puddles and snow, and must always be kept stored in a dry place.

E Never operate the vehicle near rivers, ponds or lakes, to avoid the risk of the Carrera RC car falling into the water. Avoid running on courses which are laid exclusively with sand.

F Do not expose the Carrera RC vehicle to direct sunlight. To avoid the electronics in the car overheating, when temperatures are above 35 °C, regular short pauses in operation are essential.

G Never subject the Carrera car to repeated changes of load – that means continuously reversing it.

H Always place the car on the floor by hand. Never throw the car on the floor from a standing position.

I Avoid jumping from jumps or ramps higher than 5 cm (0.16 ft.).

K Never use strong solvents for cleaning the car.

L To avoid malfunctions to the control system resulting in uncontrolled operation of the Carrera RC vehicle, check that the controller batteries and the rechargeable batteries in the vehicle have sufficient charge.

M The Carrera RC vehicle must be inspected before and after operation, each time it is used, to ensure that it has not become disassembled. Any screws or nuts that may have become loosened during operation must be tightened.

Instruction Manual

Contents of package

- 1x Carrera RC Vehicle
- 1x Controller
- 6x 1.5 V Micro AAA batteries (non-rechargeable)

Inserting the batteries in the vehicle

2 Using a screwdriver, remove the cover of the battery compartment in the Carrera RC car. Insert the Carrera RC batteries (not rechargeables) in the vehicle. Ensure the polarity is correct. Replace the compartment cover using a screwdriver.

Inserting the batteries in the controller

3 Open the battery compartment with a screwdriver and insert the batteries in the remote control. Ensure the polarity is correct. Replace the compartment cover using a screwdriver.

Now you can drive the car

The Carrera RC car and the remote control are bound as a factory setting.

4 1. Switch the car ON at the ON/OFF switch. The LED on top of the car will flash rhythmically.

5 2. Switch on the controller. The LED on top of the controller will flash rhythmically. After a few seconds, the LEDs on the car and on the controller will light continuously, meaning the bind has been made.

6 Adjusting the steering

If the Carrera RC vehicle is found to pull towards the left or right while moving, use the adjuster control shown in the illustration to adjust the car's track precision.

Let's practise!

7 **Warning! This vehicle reaches high speeds!** Practice on an empty surface at least 2.5 metres (8.2') square. **When first starting, be very careful when operating the gas pedal.**

- **When changing over to new batteries, an operating pause of at least ten minutes is essential.**
- **Avoid constant motor operation.**
- **If the vehicle switches itself off several times in quick succession, the batteries are discharged. Please insert new batteries.**
- **To switch off after use, follow the steps in the reverse order.**
- **Please always store the batteries away from the vehicle.**
- **Clean the Carrera RC car after use.**

Controller functions – FULL FUNCTION

8 You can steer the car in any direction using the joysticks:

- Joystick on left:** forwards/backwards
- Joystick on right:** left/right

Troubleshooting

Problem: Car does not move. / Car cannot be controlled.

Cause: Either the switch on the controller or the car is set to OFF.
Solution: Switch on.

Cause: There are weak or no batteries in the model.

Solution: Insert new batteries.

Cause: The car has come to a stop at an obstacle.

Solution: The voltage surge protector has switched the car off. Turn the ON/OFF switch on the car to OFF, then back to ON, and place the car on a clear surface.

Cause: Weak batteries in the controller or in the model.

Solution: Insert new batteries.

Cause: When it was last used, the model was not switched off, and the battery is empty.

Solution: Insert new batteries.

Cause: The vehicle is very warm.

Solution: Switch both car and controller off and allow the car to cool down for about 30 minutes.

Errors and changes excepted
 Colours / final design – changes excepted
 Technical changes and design-related changes excepted
 Pictograms = symbolic photos

