



#370301016X Race Catamaran

  **Assembly and operating instructions**

 **Οδηγίες συναρμολόγησης και λειτουργίας**

 **安装和使用说明**

 **조립과 작동 방법**



Digital version



Made in China · Fabriqué en Chine


carrera-rc.com

Carrera Toys GmbH · Rennbahn Allee 1 · 5412 Puch / Salzburg · Austria

GB USA Dear customer

Congratulations on purchasing a Carrera RC model boat, manufactured in accordance with the latest technology. As it is our constant endeavour to develop and improve our products, we reserve the right to make modifications, either of a technical nature or with respect to features, materials, and design, at any time, and without prior notice. For this reason, no claims will be accepted for any slight deviations in your product from the data and illustrations contained in these instructions. These operating and assembly instructions are an integral part of the product. **Important!** Please read this manual carefully and **keep these instructions for future reference** and in the event that the product is passed on to a third party.

For the latest version of these operating instructions and information on replacement and spare parts available, please visit carrera-rc.com in the service area.

Declaration of conformity

Carrera Toys GmbH hereby declares that this model including the controller conforms with the fundamental requirements of the following EC directives: EC Directives 2009/48/EC and the other relevant regulations of Directive 2014/53/EU (RED). The original declaration of conformity can be requested from carrera-rc.com.



Maximum radio-frequency power transmitted <10 dBm · Frequency range: 2400–2483.5 MHz

Warning!

Inappropriate use may result in severe injuries and/or damage to property. It has to be operated with care and caution and requires both mechanical and mental skills. The operating instructions contain notes on safety and technical regulations as well as information on maintaining and operating the product. It is indispensable to read these instructions thoroughly before the first usage. Only this helps to avoid accidents with injuries and damage.



WARNING! This toy contains small parts which can be swallowed and is therefore not suitable for children under 3 years of age.

WARNING! Danger of pinching during operation! Remove all packaging materials and wire fastenings before handing the toy over to the child. Please retain the packaging and address for information and in the event of any questions.



This symbol, showing refuse bins with a cross through them, denotes that empty batteries, rechargeable batteries, button cells, rechargeable battery packs, equipment batteries, disused electrical equipment, etc. should not be disposed of in domestic refuse, as they are harmful to the environment and health. Do not mix dissimilar battery types or employ new and used batteries together. Rechargeable batteries are only to be charged by adults. Empty batteries should be removed from the product. Do not recharge non-rechargeable batteries due to risk of explosion. Never use damaged batteries. Remove batteries if consumed or if product is to be left unused for a long time. Always replace the whole set of batteries at one time, taking care not to mix old and new ones, or batteries of different types.

Rechargeable batteries are to be removed from the toy before being charged. Batteries are to be inserted with the correct polarity. Supply terminals are not to be short circuited.

The appliance is only to be used with the power supply unit provided with the appliance. The use of a different power supply unit may lead to the permanent damage of the battery and neighbouring parts, as well as physical injury! **WARNING:** For the purposes of recharging the battery, only use the detachable supply unit provided with this toy. Battery chargers used with the toy are to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they must not be used until the damage has been repaired. The toy is only to be connected to Class II equipment bearing the following symbol.

**FCC statement**

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IC statement

The device contain license-exempt transmitter(s)/ receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. The device must not cause interference;
2. The device must accept any interference, including interference that may cause undesired operation of the device.

Safety instructions

A A Carrera RC boat is a remote controlled model boat that uses special rechargeable batteries for this purpose.

Only original Carrera RC LiFePO₄-rechargeable batteries may be used. Rechargeable batteries are to be removed from the boat before being charged.

B **Please note particularly that the propellers and the boat have no function out of the water.** When starting, always switch on the boat first, screw the cover closed and then place it in the water, before switching on the controller.

To switch off after the run, always follow the reverse order!

C Do not run your boat during a thunderstorm! Atmospheric interference can lead to malfunctions.

D Do not expose the Carrera RC boat to direct sunlight. To avoid the electronics in the boat overheating, when temperatures are above 35 °C, regular short pauses in operation are essential

E Never use strong solvents for cleaning your model.

F Please clean the water sensor contacts regularly with tap water and a little vinegar-based cleaner.

G To avoid malfunctions to the control system resulting in uncontrolled operation of the Carrera RC boat, check that the controller batteries and the rechargeable batteries in the boat have sufficient charge. Supply terminals are not to be short-circuited.

H The Carrera RC boat must be inspected before and after operation, each time it is used, to ensure that it has not become disassembled. Any screws or nuts that may have become loosened during operation must be tightened.

I Do not take hold of your model at the stern. The boat's propeller may unexpectedly start to rotate. Only take hold of your boat at the bow or at the sides and never touch the controller when doing this.

K Safety propeller

The propeller switches off on being taken out of the water. Please note particularly that the propellers have no function out of the water.

The boat cannot be operated on the ground.

L The boat is to be operated in water only when fully assembled. **This boat is unsuitable for sailing in salt water!**

Please ensure your remote control batteries have the required capacity and make sure the LiFePO₄ power pack is fully charged.

M Be sure not to allow the propeller or the rudder to touch the bed of the water. If this is allowed to happen it may lead to permanent damage and severely affect the manoeuvrability and speed of the boat.

If necessary, change the propeller for the replacement propeller.

Contents of package

- 1x Carrera RC Boat
- 1x Controller
- 1x Presentation & stocking stands
- 1x USB charger cable
- 1x Rechargeable Battery
- 1x Set of batteries (non-rechargeable)

Charging the rechargeable battery via computer

2 Rechargeable batteries are to be removed from the toy before being charged. Take care only to charge the LiFePO₄ battery supplied with the LiFePO₄-charging unit (USB charger cable) also supplied. If you attempt to recharge the battery with any other LiFePO₄-battery charger or any other type of charger, this may result in serious damage. **Please carefully read the previous chapter with warnings and guidelines on the usage of rechargeable batteries before proceeding.** You can recharge the rechargeable battery with the respective USB charger cable from a computer USB port (USB 3.0) or a USB power supply unit with at least 1A output voltage:

- Connect the USB charger cable with the USB port of a computer **①**. The LED on the USB charger cable lights green and indicates that the charger is correctly connected to the computer. If you plug in a model that has an empty battery, the LED on the USB charging cable no longer lights up, and shows that the battery is being recharged. The USB charging cable and the charging socket on the model are designed to make incorrect connection impossible. **②**
- It lasts about 50 minutes to recharge a discharged (NOT a deep-discharged) battery. When the battery is fully charged, the LED displayed on the USB charger cable lights green again.

Note: when delivered, the LiFePO₄ rechargeable battery contained is already part-charged, so the first charging operation will not last so long.

Always recharge the battery after use to prevent its becoming deep discharged. After use, the battery must be allowed to cool down for at least 20 minutes before it can be fully recharged. Recharge the battery occasionally (suggested every 2–3 months). Supply terminals are not to be short-circuited. Failure to treat the battery as described above can lead to its becoming defective. Never leave the battery unattended while it is being charged.

Installing the rechargeable battery

3 Using a screwdriver, remove the cover of the Carrera RC boat.

4 Put the battery in place.

Inserting the batteries

5 Open the battery compartment with a screwdriver. Press the release button and take the battery compartment out of the controller. Please keep in mind the correct polarity. Different types of batteries or new and used batteries are not to be mixed. Push the battery compartment back into the controller until it latches in place. If necessary, screw the battery compartment in place with a screwdriver.

Now you can drive the boat

6 The Carrera RC boat and the controller are bonded at the factory.

Connect the plug-in connection at the model and switch on the model at the ON/OFF switch.

7 Replace the compartment cover using a screwdriver.

8a **Please note particularly that the propellers and the boat have no function out of the water.**

The controller must be switched off.

8b **Place the boat in the water.**

Switch on the controller. The LED on top of the controller will flash rhythmically.

After a few seconds, the LED on the controller lights continuously. Meaning the bind has been made.

Let's practise!

9 **Caution: this boat can reach speeds up to 10 km/h.**

When first starting, be very careful when operating the gas pedal. Practice running slowly for at least two to three full charges of the battery before you start practising faster manoeuvres.

Before launching from the bank, make sure the boat and the controller are connected (see above)

• Avoid constant motor operation.

• Bring the boat back to the bank after about 10 – 15 minutes to charge the battery

• After use, remove or disconnect the battery.

• After the run, turn the switch under the boat's cover back to OFF.

• Never run more than 2 batteries down one after the other. After running down two fully-charged batteries, a pause in running for at least 20 minutes is essential.

- After sailing it, clean the Carrera RC boat carefully
- Always recharge the battery immediately after use to prevent its becoming deep discharged.
- Always keep the Carrera RC battery stored outside the boat.

Controller functions

10 When the controller is switched on, the red LED lamps at the front of the controller are lit.

11 Control digital proportional

Gas pedal to the rear: Stepplessly-controlled forwards
Gas pedal to the front: braking

Turn the steering wheel clockwise: Stepplessly-controlled right

Turn the steering wheel anti-clockwise: Stepplessly-controlled left

12 Steering-TRIMM – Fine steering adjustment

If the vehicle does not run in a straight line, you can make fine steering adjustments here.

13 Thanks to 2.4 GHz technology, up to 16 boats can be operated on one course at the same time. This is possible even without harmonising frequencies between the racing drivers.

Battery lever check

14 When the boat's battery is almost flat, the boat stops for about five seconds. It can then operate again for 20 seconds.

The five-second switch-off and restart for 20 seconds following is repeated five times altogether, then the boat switches off completely.

!!! After the first stop, please head directly for the bank without delay and replace the battery immediately.

Troubleshooting

Problem

Boat does not move

Cause: The boat is not in the water.

Solution: Switch on the boat and place it in the water. Please note particularly that the propellers and the boat have no function out of the water.

Cause: Either the switch on the controller or the boat is set to OFF.

Solution: Switch on

Cause: There is no rechargeable battery in the boat or the battery is too weak.

Solution: Insert charged battery

Cause: The overheating protection has caused the boat's motor to cut out due to excess temperature.

Solution: Switch off the receiver.

Leave the RC boat to cool down for approx. 30 minutes.

Cause: The battery or rechargeable battery in the transmitter or boat is too weak.

Solution: Insert new battery or recharged battery.

Cause: The boat is very warm.

Solution: Allow the RC boat to cool down for about 30 minutes.

Cause: The controller is possibly not correctly connected with the receiver in the model.

Solution: Establish contact between model and controller as described under "Now you can drive the boat".

Problem

Boat cannot be controlled

Cause: Boat starts moving unintentionally...

Solution: First switch on the boat, then the controller.

Solution: Please replace the batteries in the controller or switch the controller on.

Errors and changes excepted

Colours / final design – changes excepted

Technical changes and design-related changes excepted

Pictograms = symbolic photos

GR Αξότιμη πελάτη

Σας συγχωρούμε για την αγραφή του ακάθιδου μοντέλουμ Carrera RC, το οποίο κατασκευάστηκε σύμφωνα με το τελευταίο επίπεδο της τεχνολογίας. Επειδή προσπούδωμάς πάντοτε να βελτίωνουμεν την εξέλιξη και ανάπτυξη των προϊόντων μας, επιβελασύνωμε για τυχόν τεχνικές αλλαγές στον εξαλογισμό, στα υλικά και στο σχέδιο του ελαπτώματος οποιασδήποτε σημχρ. και χωρίς καμία προδιατοποίηση. Μικρές αποκλίσεις του αγοραστήσαν πρόσωντας από τα σπάσια και τα φωτογράφισας αυτών των οδηγών σε κοινή περίπτωση δεν μπορούν να θεωρεύονται αδύνατες αποαπόδοτη μορφή. Αυτές οι αδηγίες χρήσης και συναρμολόγησης αποτελούν αναπόταμό συμπλήρωμα του προϊόντος. Σημαντικό! Διαβάστε αυτές τις αδηγίες χρήσης προσεκτικά και κρατήστε τις για μελλοντική χρήση και σε περίπτωση που το προϊόν δεθεί σε τρίτο άτομο.

Την τελευταία και πιο ενεργημένη έκδοση αυτών των οδηγών χρήσης, ήπιας και πληροφοριών για ανταλλακτικά θα βρείτε στο carrera-rc.com στον τομέα Service.

Δήλωση συμμόρφωσης

H Carrera Toys GmbH δηλώνει δια της παρούσης ότι το μοντέλο αυτό συμπειριλματωνόμενου του χειριστή (Controller) συμφέρει με τις βασικές απαραίτησης των ακόλουθων οδηγών της EK: Στο πεντάμενο των Οδηγιών της ΕΕ 2009/48 και των άλλων σχετικών διατάξεων της Οδηγίας 2014/53/EU (RED). Το πρωτότυπο της δήλωσης συμμόρφωσης μπορεί να το ξηρώσετε από την carrera-rc.com.



Μεγιστή ισχύς ραδιοισχυροτήτων <10dBm - Περιοχή συγνότητας: 2400 – 2483.5 MHz

Προειδοποίησης!

Σε περίπτωση εσφαλμένου χειρισμού μπορεί να προκληθούν εσφαλματικοί και ικανές ζημιές. Πρέπει να ελέγχεται προσεκτικά και απαιτεί ιδιαιτερές μηχανικές και πνευματικές ικανότητες. Οι αδηγίες περιέχουν υποδείξεις ασφαλείας και προδιατοποίησης, καθώς επίσης υποδείξεις για τη συντήρηση και λειτουργία του προϊόντος. Οι αδηγίες αυτές πρέπει, πριν από την έναρξη λειτουργίας του προϊόντος, να διαβαστούν και να κατανοθούν καλά. Μόνον επένδυση με αποφεύγοντας εσφαλματικούς και ικανές ζημιές.



Προειδοποίηση! Το συγκεκριμένο παιχνίδι δεν είναι κατάλληλο για παιδιά κάτω των 3 ετών, λόγω κινύνου κατάστασης μηχανών εσφαλμάτων.
ΕΠΙΔΟΤΟΠΟΙΗΣΗ! Κίννουν μαγκώματας κατά τη λειτουργία! Απομακρύνετε όλα τα υλικά συσκευασίας και τα σύμματα στερέωσης προτού δύσετε το παιχνίδι στο παιδί. Πατο πληροφορίες και τυχών απορίες φύλαξτε τη συσκευασία και τη διεύθυνση.



Το σύμβολο που απεικονίζεται εδώ με τον διανορφισμένα υποδεικνύεται ότι άδεις μπαταρίες, επαναφορτίζουμενες μπαταρίες, επιτέθεση μπαταρίες, συσκευές, μπαταρίες συσκευών, ηλεκτρικές πολυεπιλογές μπαταρίες σεν ανοικτά στο καλώδιο ανοικτών απορρυμάτων, διατίθλωση των περιβλητών και την υγεία, δεν επηρέπτεται να χρησιμοποιήσεται μαζί μπαταρίες διαφορετικών τύπων ή κανονικές και μεταχρισμένες μπαταρίες. Οι επαναφορτίζουμενες μπαταρίες πρέπει να φορτίζονται μόνο από έγχιστες. Αφοράτε τις άδειες μπαταρίες που παραδόθηκαν σα φορτητές και τροφοδοτικές. Για τη φόρτωση επηρέπτεται να χρησιμοποιείται μόνο το παραδόθηκαν φορτητός και τροφοδοτικός. Για τη φόρτωση επηρέπτεται να χρησιμοποιείται μόνο το φορτητό που παραδόθηκε με αυτό το παιχνίδι. Οταν ο φορτητός χρησιμοποιείται μόνον από την πρώτη προσέταση, το παιχνίδι διέλεγχεται.



Το σύμβολο που απεικονίζεται εδώ με τον διανορφισμένα μπαταρία από το μοντέλο πριν τη φόρτωση. Προσέχετε για τη αστική πολικότητα. Μην βραχυκύκλωστε φορτητές και τροφοδοτικές. Για τη φόρτωση επηρέπτεται να χρησιμοποιείται μόνο το παραδόθηκαν φορτητός. Η χρήση αλλού φορτητή παραδέχεται μεταξύ της πρώτης προσέτασης μηχανώματα τα οποία παραδόθηκαν σα φορτητές και τροφοδοτικές. Το εύκαμπτο καλώδιο αυτού του φορτητή και το παραδόθηκαν φορτητό που παραδόθηκε με αυτό το παιχνίδι. Οι αντιστροφές μηχανώματα που παραδόθηκαν σα φορτητές και τροφοδοτικές πρέπει να φορτίζονται μόνο από την πρώτη προσέταση. Το παιχνίδι επηρέπτεται να χρησιμοποιείται μόνο με συσκευές της Κατηγορίας προσέτασης II.

Διατάξεις ασφαλείας

A Το ακάθιδο Carrera RC είναι ένα τηλεχειριζόμενο ακάθιδο μοντέλουμ, που λειτουργεί με ειδικές επαναφορτίζουμενες μπαταρίες. Επηρέπτεται και χρήση μόνο των γνήσιων επαναφορτίζουμενων μπαταρίων LiFePO₄, της Carrera RC. Αφοράτε την επαναφορτίζουμενη μπαταρία από το ακάθιδο πριν τη φόρτωση.

B Λάβετε οπωδήποτε υπόψη ότι οι έλικες δεν λειτουργούν έξω από το νερό.

Κατά τη θέση σε λειτουργία ενεργοποιείται πάντοτε πρώτα το ακάθιδο, μινύνεται τα καλύμματα την κλειστή θέση και τοποθετείται το ακάθιδο στο νερό και μετά ενεργοποιείται το χειριστήριο. Για την απενεργοποίηση μετά τη χρήση ακολουθήστε την αντίστροφη σειρά!

C Μην το οδηγείτε επίσης κάτω από αγνώστη υψηλής τάσης ή ιστούς κεραύνων ή όταν έχει κακοκαρία! Οι οπισσωμένες διατάξεις και παρεμβολές μπορεί να προκαλέσουν δυσλειτουργία του αυτοκινήτου.

D Το ακάθιδο Carrera RC δεν πρωτεύεται να εκτίθεται μόνιμα στην ηλιακή ακτινοβολία. Προς απορία υπερθέρμανσης των ηλεκτρονικών του ακάθιδου πρέπει σε θερμοκρασίες πάνω από 35°C να πραγματοποιείται τακτικά σύντομα διάλειμματα.

E Μη χρησιμοποιείτε ποτέ ισχυρή καθαριστική μέσα για τον καθαρισμό του αυτοκινήτου. Καθαρίστε της επαθές των οισθητήρων νερού τακτικά με νερό της βρύσης και καθαριστικό ζύδη

G Προσφυγή πρόκλησης βλαβών μετά στούντιμα ελέγχου του ακάθιδου Carrera RC και κατ' επέκταση προς αποφυγή ανεξέλεγκτης κίνησής του, πρέπει να ελέγχεται από πρίν, αν οι μπαταρίες του χειριστηρίου και οι επαναφορτίζουμενες μπαταρίες του ακάθιδου, είναι καλά φορτισμένες. Μην βραχυκύκλωστε φορτητές και τροφοδοτικά.

H Πριν και μετά από κάθε οδήγηση πρέπει να ελέγχεται πάντοτε τη σωτήρη συναρμολόγηση του ακάθιδου Carrera RC, ενδεχομένως θα πρέπει να οφεγγίσεται τη βίδης και τα ποταμώδια.

I Μην πάντες από την πίσω πλευρά το μοντέλο, η έλικα ενδέχεται να πεταφορεί μη θηλεμένα. Πάντες το ακάθιδο πάντα από μπροστά ή πλευρικά και σε καμία περίπτωση μην αγγίζετε το χειριστήριο.

K Ελίκια ασφαλείας Ο έλικας διακόπτεται τη λειτουργία του μόνιμη γενε από το νερό. Εγκές υπόψης ότι οι έλικες δεν επηρέπτεται να λειτουργούν έξω από το νερό.

L Το ακάθιδο Carrera πρωτεύεται να χρησιμοποιείται μόνο μέσα στο νερό. **Αυτό το ακάθιδο δεν είναι κατάλληλο για χρήση σε ωλαστάρινο νερό!** Φροντίστε ώστε οι παραμοτήρες του χειριστηρίου που διαθέτουν επαρκή χωρητικότητα και οι μπαταρίες να είναι πλήρεις φορτισμένες.

M Αποφέυγετε απαραίτητης την επαφή του έλικα του πηδαλίου με τον βιβό. Εάν δεν ακολουθήστε τις οδηγίες μπορεί να προκληθεί οισθρή ζημιά και να μειωθεί η ταχύτητα και η θυμότατητά ελιγμών του ακάθιδου. Σε μια τέτοια περίπτωση, αντικαταστήστε τον έλικα με τον εφεδρικό.

N Παραστούσας εξοπλισμός 1x Σκάφος Carrera RC

1x Controller (χειριστήριο)

1x Σταύρο παρούσασης και φύλαζης

1x Καλώδιο φόρτησης USB

1x Επαναφορτίζουμενη μπαταρία

1x Σετ μπαταρία (μη επαναφορτίζουμενη)

Προσέχετε την επαναφορτίζουμενη μπαταρία LiFePO₄ (USB καλώδιο φόρτησης) που ονομάζεται την επαναφορτίζουμενη μπαταρία. Εάν προσποήθετε να φορτισείτε την επαναφορτίζουμενη μπαταρία, πρέπει να προκληθούν οισθρές ζημιές. Μπορεί να συνδέσεται μόντελό σας με ελαχηλμένη επαναφορτίζουμενη μπαταρία, που θα οντούσε με την πρώτη προσέταση 1A ταξίδιο.

• Συνδέστε την USB καλώδιο φόρτησης από πρώτη και δεύτερη ότι ο φορτητής είναι συστάτη συνδέσμου με τον υπολογιστή. Μόλις συνδέσεται ένα μοντέλο με ελαχηλμένη επαναφορτίζουμενη μπαταρία, πουνει να ανάβει η LED στο καλώδιο φόρτησης USB σηματοδοτώντας ότι η επαναφορτίζουμενη μπαταρία φορτίζεται. Το καλώδιο φόρτησης USB η υπόδοχη φόρτησης στο μοντέλο είναι κατασκευασμένη κατά τρόπου ώστε να αποκλείεται η σύνδεση με λανθασμένη πολυκάλωδη **2.**

• Η επαναφορά μπαταρία μέσω εκφόρτισης μπαταρίας διασκει περίπου 50 λεπτά. Όταν φορτίσει η μπαταρία, η ένδειξη LED στο USB καλώδιο φόρτησης ανάβει πάλι πράσινη.

B 프로펠러 내지 보트는 물 밖에서는 어떤 기능도 하지 않는다는 것을 반드시 주지하십시오.

작동을 개시할 때는 항상 보트를 먼저 켜고, 넓개의 나사를 죄어 닫은 후 물에 띠운 뒤 컨트롤러를 켜십시오.

항해 후 물 때는 반대 순서로 진행하십시오.

C 고압전선이나 전파송전대 아래에서, 혹은 폭풍우시에는 주행하지 마십시오! 대기소동이 전파교란을 일으킬 수 있습니다.

D 카레라 RC 보트를 직사광선에 노출하지 마십시오.

배의 전자 기기가 과열되는 것을 피하기 위해 35°C 가 넘는 온도에서는 정기적으로 짧은 휴식을 취해주시십시오.

E 모델을 세척할 때 절대 물체를 사용하지 마십시오.

F 물선에서 접촉부를 수도물과 초산 함유 세척제를 사용하여 정기적으로 세척하십시오.

G 조종 시스템의 장애로 인해 카레라 RC 보트가 통제되지 않는 상태에서 항해하는 것을 피하기 위해 컨트롤러와 보트의 전자기 제대로 충전된 상태인지 점검해야 합니다. 충전기와 전원에 단선이 생기지 않도록 하십시오.

H 카레라 RC 보트가 세대로 조립되어 있는지를 항해 전과 후에 항상 점검해야 하고, 경 우에 따라서 나사와 암니사를 조여주어야 합니다.

I 모델의 뒷부분을 손으로 잡지 마십시오. 프로펠러가 얘기지 않게 돌아갈 수 있습니다.

보트는 항상 앞 부분이나 옆 부분만 잡고, 컨트롤러와는 절대 접촉하지 마십시오.

K 안전 프로펠러

물에서 끌어내면 프로펠러는 깎집니다. 프로펠러는 물 밖에서는 어떤 기능도 하지 않는다는 것을 반드시 주지하십시오.

보트는 물에서는 작동할 수 없습니다.

L 카레라 보트는 물에서만 사용해야 합니다. 이 보트는 소금물에서 사용하기에 적합하지 않습니다.

원격제어 배터리의 용량이 충분하고 배터리가 충분히 충전되어 있는지 확인하십시오.

M 프로펠러 및 노가 바닥과 접촉하는 것은 반드시 피해야 합니다. 이 점을 주의하지 않으면 저속적인 손상을 입을 수 있습니다. 보트의 돌진력 및 속력에 지장을 줄 수 있습니다. 필요한 경우 프로펠러를 예비 프로펠러로 교체하십시오.

포장내용

1 1x Carera RC 보트

1x 컨트롤러

1x 프레센티에션 및 보관대

1x USB 충전 전선

1x 충전지

1x 세트 배터리 (충전 할 수 없음)

충전지

2 재충전 배터리를 충전하기 전에 장난감에서 제거해야 합니다.

동봉된 LiFePO₄-전지가 반드시 동봉된 LiFePO₄ 충전기를 사용하여 충전해야 한다는 것에 유의하십시오. 전지를 다른 LiFePO₄ 전지 충전기나 다른 충전기를 사용하여 충전하면, 심한 손상이 생길 수 있습니다. 전행하기 전에 자동 충전 배터리 사용에 관한 지침과 경고가 있는 이전장을 주의 깊게 읽으십시오. 해당 USB 충전선을 사용하여 컴퓨터 USB 포트 혹은 최소 1A 출력 전입을 갖는 USB 전원 공급 장치의 전원을 충전할 수 있습니다.

- USB 충전선을 컴퓨터의 USB 포트에 연결하십시오. **①** USB 충전선의 절들이 초록색으로 빛을 발하고, 충전 장치가 컴퓨터나 제대로 연결되었다는 것을 알려줍니다. 배 전지를 장착한 모델을 연결하시거나, USB 충전 선의 절들이 빛을 발하지 않고, 전지가 충전되고 있다는 것을 나타내줍니다. USB 충전 선 및 모델의 충전 소켓은 서로 다른 규모를 접속할 수 없게 제조되어 있습니다. **②**
- (완전 방전이 아닌) 방전된 전지가 다시 충전될 때 까지는 약 50분이 걸립니다. 전지가 완전히 충전되었을 때, USB 충전선의 절들이 다시 초록색으로 빛을 발합니다.

참고: 동봉된 배터리는 일부 충전되어 있습니다. 따라서 최초의 충전 시간은 다소 짧게 걸릴 수 있습니다.

충전지의 원인 방전을 피하기 위해 사용 후 충전지를 반드시 다시 충전하십시오. 충전지는 사용 후 다시 원전히 충전하기 전에 최소한 20분간 식혀야 합니다. 이 휴식시간을 준수하지 않으면 충전지가 고장날 수 있습니다. 충전지를 충족(약 2~3 개월마다) 충전하십시오. 충전기와 전원에 단선이 생기지 않도록 하십시오. 위에 언급한 충전지의 유통법을 지키지 않으면 고장날 수 있습니다. 충전할 때 절대로 배터리를 방치하지 마십시오.

충전지 장착

3 카레라 RC 보트 뚜껑을 드라이버로 여십시오.

4 전지를 장착하십시오.

컨트롤러에 전지 장착

5 드라이버로 전지함을 여십시오. 해제 단추를 눌러 컨트롤러에서 전지함을 분리하십시오. 양극이 제대로 맞는지 주의하십시오. 새 전지와 현 전지, 혹은 서로 다른 제조사의 전지를 함께 사용하지 마십시오. 전지함이 장착될 때 까지 컨트롤러에 밀어 넣으십시오. 필요한 경우 드라이버를 사용하여 전지함을 나사로 조여주십시오.

이제 주행을 시작하실 수 있습니다.

6 Carera RC 보트와 컨트롤러는 공장에서부터 연결되어 있습니다. ON/OFF 스위치에 모델을 켜십시오.

7 뚜껑을 드라이버로 조여 닫으십시오.

8a 프로펠러 내지 보트는 물 밖에서는 어떤 기능도 하지 않는다는 것을 반드시 주지하십시오.

컨트롤러를 꺼야 합니다.

8b 보트를 물에 띠우십시오.

컨트롤러를 켜십시오. 컨트롤러의 절들이 율동적으로 깜박입니다. 몇 초 후 컨트롤러의 절들이 지속적으로 깜빡니다. 절속이 원료되었습니다.

자, 이제 연습합시다!

9 주의: 이 보트는 시속 10 km까지 속력을 낼 수 있습니다.

처음으로 작동할 때는 가속기를 매우 조심하여 사용하십시오. 빠른 기동연습으로 넘어서기 전에 최소한 2~3 층전량 정도 서행연습을 하십시오.

• 강등에서 출항하기 전에 보트와 컨트롤러가 연결되어있는지 점검하십시오(위를 참조).

• 지속적으로 모터가 기동되는 것을 피하십시오.

• 약 10~15 분쯤후 강등으로 돌아와서 출전 지를 교환하십시오.

• 항해가 끝난 다음에는 보트 앞쪽에 밀에 있는 스위치를 다시 OFF로 전환하십시오.

• 충전지 최대 2개방이 소진될 때 까지 연속하여 주행하십시오. 2번 충전한 다음에는 반드

시 약 20분간 유휴로 사용해야 합니다.

• 항행 후 충전지를 개내거나 연결을 보려하십시오.

• 모델이 반복하여 어려차례 저절로 깨끗이 충전지가 비었습니다. 충전지를 충전하십시오.

• 충전자는 항상 배의 외부에 보관하여 야 합니다.

컨트롤러 기능

10 컨트롤러가 커져있으면 컨트롤러의 빨간색 절들이 빛을 발합니다.

11 디지털 비례 조종

속도조절기 뒷쪽으로: 단계 없이 전진

속도조절기 앞쪽으로: 브레이크

조종기들 시계 방향으로 돌리십시오: 단계 없이 오른쪽

조종기들 시계 반대 방향으로 돌리십시오: 단계 없이 왼쪽

12 Steering-TRIMM 운전삼세조정

차량이 직진하지 않으면 이 기능에서 차량을 세세조절할 수 있습니다.

13 12 GHz 기술을 이용하여 한 강주로에서 최대 16대의 보트까지 항해할 수 있습니다.

이것은 운전자들간에 주파수를 조절하지 않고 가능함.

전지 상태 표시

14 배의 전자가 거의 빈 상태가 되면, 배는 5초 동안 정지합니다. 그 후 배는 20초 동안 다시 항해할 수 있습니다.

5초 정지 상태와 이후 10초 동안 가능한 항해는 도합 5번 반복되며, 그 후에는 배가 완전히 깨집니다.

15 첫 번째 정지 상태가 나타나면 바로 정안하여 반드시 전지를 교체하십시오.

문제 해결

문제

모델이 주행하지 않습니다

원인: 보트에 물에 있지 않습니다.

해결책: 보트를 물에 띠우십시오. 프로펠러 내지 보트는 물 밖에서는 어떤 기능도 하지 않는다는 것을 반드시 주지하십시오.

원인: 컨트롤러나 모델의 스위치, 혹은 두 스위치 모두가 "OFF"임

해결책: 켜기

원인: 모델의 충전지가 악하거나 비어있음

해결책: 모델의 충전지가 악하거나 비어있음.

원인: 너무 강한 기압 때문에 과열 보호 장치가 보트를 정지시킵니다.

해결책: 수신기를 끌 것

RC 보트를 30분 가량 식혀주십시오.

원인: 컨트롤러나 모델의 충전지/건전지가 악함

해결책: 충전된 충전지, 혹은 건전지 장착.

원인: 보트가 너무 뜨거움.

해결책: 보트와 컨트롤러 끄고, 보트를 30분 가량 식혀주십시오.

원인: 컨트롤러가 경우에 따라 모델의 수신기와 제대로 연결되어있지 않습니다.

해결책: 모델을 컨트롤러와 접속하기"에 묘사된대로 모델과 컨트롤러간의 연결을 실행하십시오.

문제

통제되지 않습니다

원인: 원하지 않는데도 보트가 움직임

해결책: 보트를 먼저 켜고, 컨트롤러를 나중에 켜 것.

해결책: 컨트롤러의 전자를 교체하든지, 아니면 컨트롤러를 켜십시오.

오류와 변동이 있을 수 있습니다.

색깔과 최종 디자인에 변동이 있을 수 있습니다.

기술과 디자인상의 변동이 있을 수 있습니다.

피토그램 = 상징그림



ACCESSORIES & SPAREPARTS

ACCESOIRES ET PIÈCES DE RECHANGE




carrera-rc.com

D Für jedes RC Fahrzeug und Flugobjekt ist auch weiteres Zubehör erhältlich. Passende Produkte finden Sie in unserem Onlineshop unter Zubehör oder bei Ihrem Fachhändler.

GB USA Additional accessories are available for each RC vehicle and aircraft. Suitable products can be found in our online shop in the accessories section or can be purchased from your authorised dealer.

F Des accessoires supplémentaires sont disponibles pour chaque véhicule RC et objet volant. Vous pouvez trouver les produits correspondants dans notre boutique en ligne sous la rubrique accessoires ou chez votre revendeur local

E Para cada vehículo y objeto volador RC hay también más accesorios disponibles. Encontrará los productos adecuados en nuestra tienda online en accesorios o en su tienda especializada.

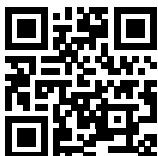

carrera-rc.com

Carrera Toys GmbH · Rennbahn Allee 1 · 5412 Puch / Salzburg · Austria