

Start/Stop Rotors

Press for LED ON/OFF

Shift beginner/normal/advanced Mode

Throttle & left/right spinning

Headless Mode

Auto-Start & Fly to 1.5 m

Auto-Landing

Trimer for left/right spinning

3D Looping

Status LED

Camera angle adjustment

Trimer for forward/backward flight

Fly forward/backward & left/right

No function

No function


Trimer for left/right flight

ON/OFF & Power LED

*Please read the operating instructions inside the package!
Bitte beachten und lesen Sie unbedingt die innen liegende Bedienungsanleitung!
Veuillez tenir compte du mode d'emploi à l'intérieur de l'emballage!
Tenga en cuenta las instrucciones de manejo incluidas!*



Scale 1:1

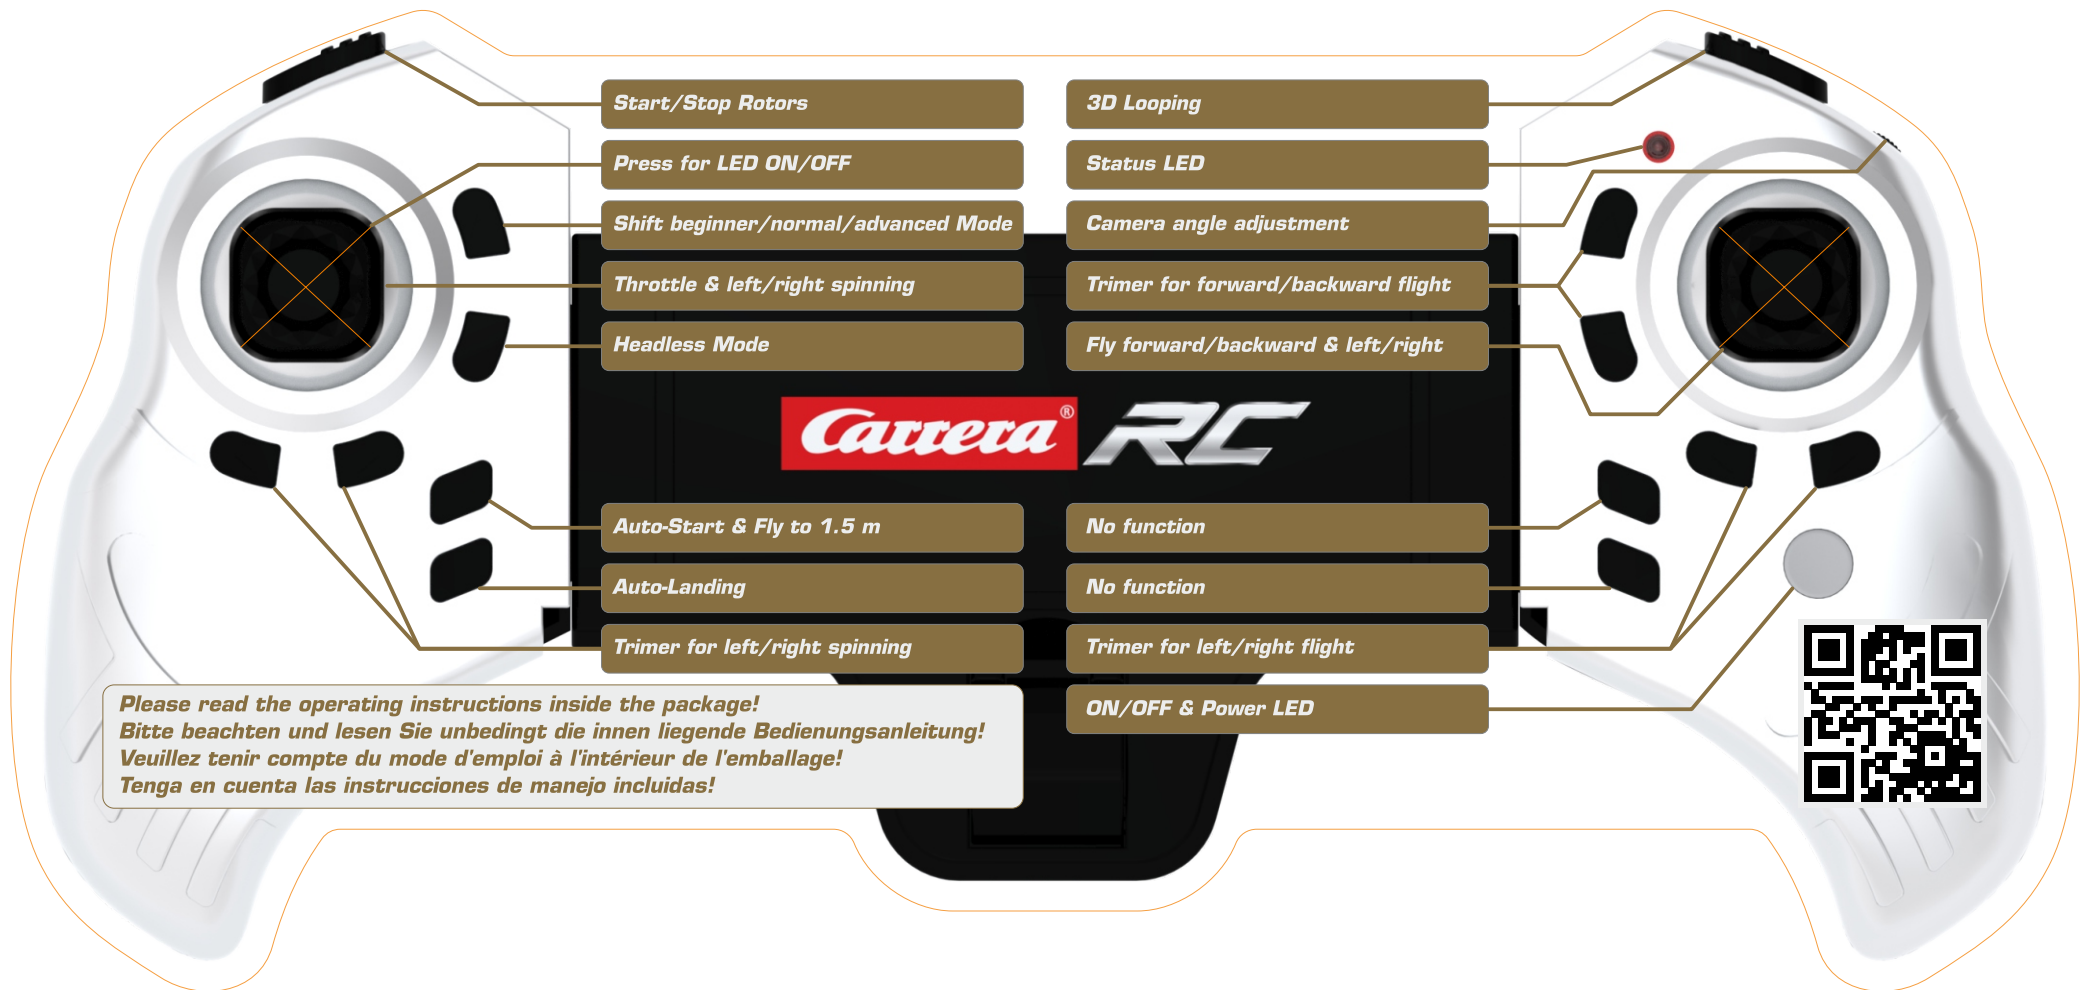

Please read the operating instructions inside the package!
Bitte beachten und lesen Sie unbedingt die innen liegende Bedienungsanleitung!
Veuillez tenir compte du mode d'emploi à l'intérieur de l'emballage!
Tenga en cuenta las instrucciones de manejo incluidas!

PANTONE 871C Gold

Silver

Black

Please note, the orange line is cut-line.